EN

CERAMIC FAN HEATER

HI FAN
black mini

OPERATING INSTRUCTIONS

Read the instructions carefully before installing and operating the appliance or performing maintenance operations. Observe all the safety instructions; failure to observe the instructions may cause accidents and/or damages. Store these instructions for future reference.

GENERAL SAFETY INFORMATION

- Use this ceramic fan heater only as outlined in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
- Ensure that the mains power complies with the voltage specified on the fan heater's data plate (230V~/50Hz).
- This product is not a toy. Children should be adequately supervised to ensure that they do not play with the appliance.
- This appliance is not suitable for use by persons (including children) with reduced physical, sensory or mental abilities, or without the necessary experience and knowledge, unless they have been adequately supervised and instructed concerning use of the appliance by a person responsible for their safety.
- Do not cover the appliance or restrict the air inlet and outlet grilles to prevent overheating.
- Ensure that all objects are at least 1 meter from the front and sides of the appliance.
- Disconnect the mains power when the appliance is not used or for cleaning operations.
- Avoid using the fan heater in dusty environments or in the presence of inflammable vapours (e.g. in workshops or garages) or paint vapours.
- Do not use the appliance to dry clothing.
- Use the appliance in a well-ventilated area.
- Avoid placing fingers or foreign objects in the air inlet/outlet grilles, as this may lead to electric shock or fire and may damage the appliance. To avoid the risk of fire, do not block the grilles or tamper with them in any way while the ceramic fan heater operates.
- Do not use the appliance if the cord or plug are damaged. If the power supply cord is damaged, it must be replaced by the manufacturer, dealer or a similarly qualified person so as to avoid any safety risks.
- Do not operate the appliance if it has fallen from a height or has suffered damage in any way. Contact qualified technical personnel to examine the appliance or perform any electrical or mechanical repairs.
- The most common cause of overheating is the build-up of dust in the appliance. Remove dust deposits by unplugging the appliance and cleaning the air outlets and grilles with the aid of a vacuum cleaner.
- Do not use abrasive detergents for cleaning this appliance. Clean the appliance with the aid of a damp (not wet) cloth rinsed in hot soapy water. Always remove the plug from the mains socket before cleaning.
- To disconnect the ceramic fan heater, push the switch to OFF and remove the plug from the socket. Pull on the plug only. Avoid pulling on the cord when disconnecting the ceramic fan heater.
- Do not place any objects on the cord and do not bend it.
- It is not advisable to use extension cords, as these may overheat and cause the risk of fire. Do not use a single extension cord to operate multiple appliances.
- Do not immerse the cord, plug or any other element of the appliance in water or other liquids.
- Do not touch the plug with wet hands.
- Do not place the fan heater above or near another heat source.

WARNING: AVOID COVERING THE FAN HEATER TO PREVENT IT FROM OVERHEATING.
The symbol below signals the above warning:

- The fan heater may cause the risk of fire if, while in operation, is covered by or comes into contact with **inflammable** material including curtains, drapery, blankets, etc. **KEEP THE FAN HEATER AWAY FROM THESE MATERIALS**.
- Do not connect the appliance to the mains power before it has been properly assembled and positioned.
- The appliance heats up slightly when in use. In order to avoid burns, do not let bare skin touch hot surfaces.

- Do not run the cord under carpets. Do not cover the cord with blankets, carpets or similar materials. Place the cord far away from busy areas or where it cannot be accidentally pulled-out.
- Do not operate the fan heater in close proximity to bathtubs, showers, washbasins or pools.
- Do not position the fan heater below a socket outlet.
- Do not operate the appliance outdoors.

WARNING: **do not use the fan heater with a controller or any other device that activates the appliance automatically, as there may be a risk of fire if the fan heater is covered or incorrectly positioned.**

- Upon initial start-up, the fan heater may emit a slight, harmless smell. This smell is a normal effect of the initial heating up of the internal heating elements, and should not recur later on.
- Non posizionare il termoventilatore sotto una presa.

WARNING:
DO NOT DEPEND ON THE ON/OFF BUTTON SWITCH AS THE SOLE MEANS OF DISCONNECTING POWER. WHEN SERVICING OR MOVING THE HEATER, ALWAYS UNPLUG THE POWER CORD.

DESCRIPTION OF PARTS

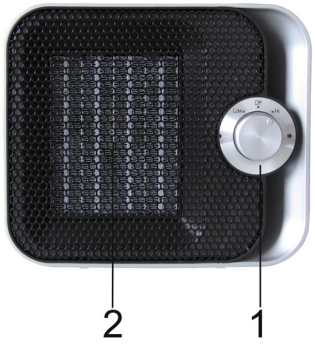

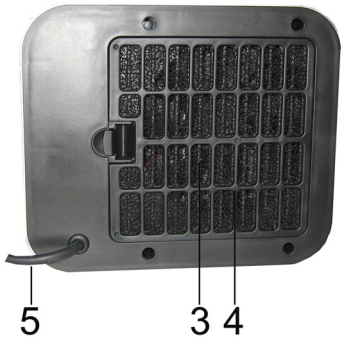

1. On/off and selection knob
2. Discharge grille
3. Air filter
4. Air suction grille
5. Power cord

HOW TO USE THE FAN HEATER

Connect the power cord to a suitable electric socket (230V).
Position the on/off and selection knob to ‘Hi’ or ‘Low’.

To operate the fan heater at maximum power (1200 W) position the knob to 'Hi'.

To operate the fan heater at minimum power (800 W) position the knob to 'Low'.

To turn the fan heater off, position the knob to ‘Off’.

This fan heater can be positioned on the floor or on an item of furniture or shelf.
The appliance is fitted with an anti tip-up device that prevents it from operating when it detects that the product inclination is greater than 45°. (This is a safety mechanism containing a steel ball: by moving the product, you can hear the ball move).
Do not position the appliance on its side or upside down.

MAINTENANCE

WARNING: ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING.
DO NOT IMMERSE HEATER IN WATER.

CLEANING

Clean the filter frequently, according to the environment: a dirty filter could restrict the air flow and cause the heater to function improperly or shut
down. Pull out the filter as the direction showed below.

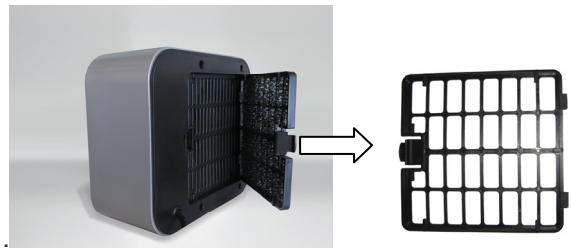

Open the rear hatch and remove the grille containing the filter.

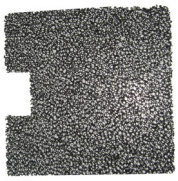

Clean the filter by water with washing agent under the temperature of 30℃.

Dry the filter after cleaning it and put back the filter to the unit.
Use the soft cloth to wipe the dust of enclosure. If the enclosure is too dusty, use the soft cloth to wipe it with water mixed with neutral detergent under 50℃ temperature. Then dry the product.
When cleaning the product, do not use oil or chemical material or other objects that can damage the surface.

STORAGE

Make the heater cool down, dry and pack well, and then put the product in a dry and ventilated place for stocking.

INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE 2002/96/EC

At the end of its working life this equipment must not be disposed of as an household waste. It must be taken to special local community waste collection centres or to a dealer providing this service. Disposing of electrical and electronic equipment separately avoids possible negative effects on the environment and human health deriving from an inappropriate disposal and enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed-out dustbin.

argo
improve your life
www.argoclima.com

MADE IN CHINA